



# Care Guide

**PLEATED & FLAT MESH  
STACKABLE FLYSCREENS**





# PLEATED & FLAT MESH CareGuide

## THANK YOU FOR PURCHASING PLEATED & FLAT MESH

### CLEANING TOP AND BOTTOM GUIDES

Dust and debris can collect in the aluminium guide channels over time. Removal of such build up is easy and important to ensure the screen's smooth movement. While the screen is fully retracted, remove any dust or debris with a soft cloth or a vacuum cleaner with a soft brush nozzle. Regular cleaning is required in dusty or coastal environments.

### CLEANING THE SCREEN MESH

The Pleated and Flat Mesh should be lightly dusted to maintain an unobstructed view and airflow. While the screen is fully extended, remove any build up with a vacuum cleaner that has a soft brush nozzle. Care should be taken not to tear or rip the mesh.

### WIND AND OPERATIONAL TIPS

The screen is fitted with tensioning cords running horizontally across the opening that provide stability to the screen, control the vertical orientation of the aluminium sliding bar and help prevent the mesh from blowing out of the top and bottom channel in windy conditions. Should the screen mesh blow out of the channels, gently retract the screen. The mesh should self-feed back into the channels. If not simply, pop the mesh back in the channel. On large openings, the screen mesh acts like a sail. In gusty or windy conditions, CW Systems recommends keeping the screen retracted to reduce possibility of damage occurring.

